

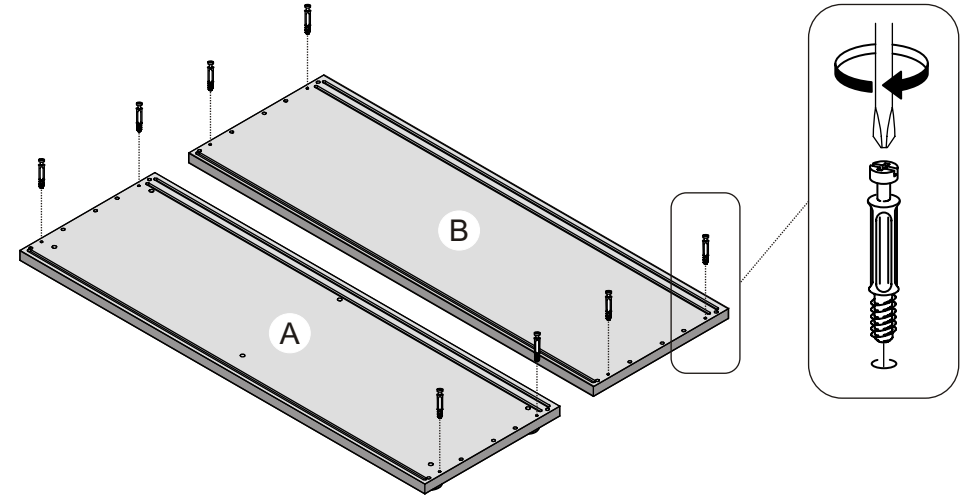


Montážní(y) návod 16.

Assembly instructions 16.
Montageanleitung 16.

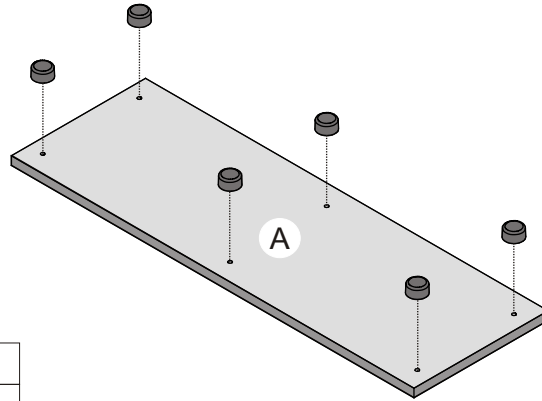

H-P P 121 S	4ks	
H-P P 122 S	4ks	
	4ks	
H-PC 120 S 6	6ks	
H-PH 120 S 6	2ks	
	2ks	
H-PL 120 S 6	8ks	
H-I PZ S	1ks	
	8ks	
H-P PZ S	8ks	
	4ks	
H-P PZ S	4ks	
	1ks	
H-P PZ S	2ks	
	1ks	
H-P PZ S	1ks	

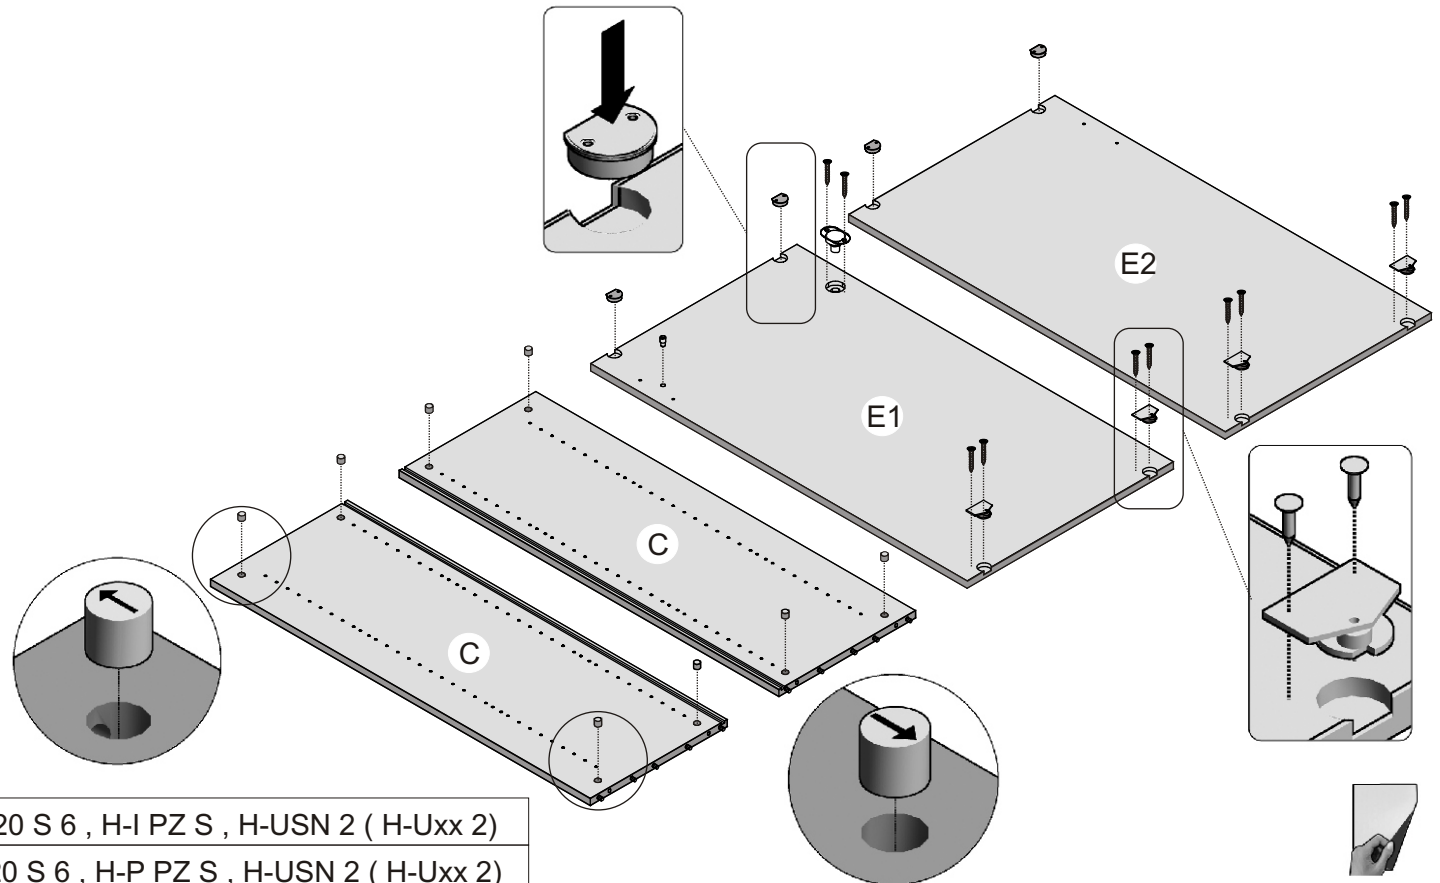

SZ 2 120 02	H-P P 121 S , H-PC 120 S 6 , H-PH 120 S 6 , H-I PZ S , H-USN 2 (H-Uxx 2)
SZ 3 120 02	H-P P 122 S , H-PC 120 S 6 , H-PL 120 S 6 , H-P PZ S , H-USN 2 (H-Uxx 2)

