

Montážní(y) návod 81.
 Assembly instructions 81.
 Montageanleitung 81.

SZ 2 80 03 L	H-RH S 6, H-RC L S 6, H-ROL M S
SZ 2 80 03 P	H-RH S 6, H-RC P S 6, H-ROL M S
SZ 2 120 01 L	H-P R 121 S, H-RC L 120 S 6, H-RH 120 S 6, H-ROL M 12 S
SZ 2 120 01 P	H-P R 121 S, H-RC P 120 S 6, H-RH 120 S 6, H-ROL M 12 S
SZ 3 80 07 L	H-RL S 6, H-RC 2 L S 6, H-ROL V S
SZ 3 80 07 P	H-RL S 6, H-RC 2 P S 6, H-ROL V S
SZ 3 120 01 L	H-P R 122 S, H-RC L 120 S 6, H-RL 120 S 6, H-ROL V 12 S
SZ 3 120 01 P	H-P R 122 S, H-RC P 120 S 6, H-RL 120 S 6, H-ROL V 12 S
SPRZ 80 40 P	H-E PRC 4 P S 6, H-E RH 4 P S 6, H-E RC 4 P S 6, H-ROL E S, H-R 400 800 30
SPRZ 80 40 L	H-E PRC 4 L S 6, H-E RH 4 L S 6, H-E RC 4 L S 6, H-ROL E S, H-R 400 800 30
SPRZ 80 60 P P	H-E PRC 6 P P S 6, H-E RH 6 P S 6, H-E RC 6 P S 6, H-ROL E S, H-R 400 800 30
SPRZ 80 60 P N	H-E PRC 6 P N S 6, H-E RH 6 P S 6, H-E RC 6 P S 6, H-ROL E S, H-R 400 800 30
SPRZ 80 60 L P	H-E PRC 6 L P S 6, H-E RH 6 L S 6, H-E RC 6 L S 6, H-ROL E S, H-R 400 800 30
SPRZ 80 60 L N	H-E PRC 6 L N S 6, H-E RH 6 L S 6, H-E RC 6 L S 6, H-ROL E S, H-R 400 800 30

H-RH S 6	2 ks		H-E RH 4 L S 6	4 ks	
	6 ks		H-E RH 6 P S 6	6 ks	
	6 ks			6 ks	
	1 ks			1 ks	
H-RH 120 S 6	1 ks			1 ks	
H-RL S 6	1 ks			2 ks	
H-RL 120 S 6	2 ks			1 ks	
	1 ks			1 ks	
H-ROL M S, H-ROL M 12 S	3 ks			2 ks	
H-ROL V S, H-ROL V 12 S	3 ks			8 ks	
H-ROL E S				2 ks	
H-E RC 4 L/P S 6	4 ks		H-RC 2 L/P S 6	2 ks	
H-E RC 6 L/P S 6	4 ks			4 ks	
H-RC L/P S 6	4 ks				
	4 ks				
H-RC L 120 S 6	2 ks				
H-RC P 120 S 6	6 ks				



