


Montážní(y) návod 82.
 Assembly instructions 82.
 Montageanleitung 82.

H-LZ S 6	8 ks		
	8 ks		
	1 ks		
	2 ks		
	3 ks		
	1 ks		
	2 ks		
	1 ks		
H-ZAS 2 S	12 ks		
	2 ks		
	2 ks		
	22 ks		
	2 ks		
	2 ks		
	1 ks		
	1 ks		
	1 ks		
	2 ks		
	2 ks		
	2 ks		
	H-I ZV S	4 ks	
		2 ks	
2 ks			
2 ks			
2 ks			
1 ks			
1 ks			
1 ks			
1 ks			
2 ks			

1 LIST 1 / 2

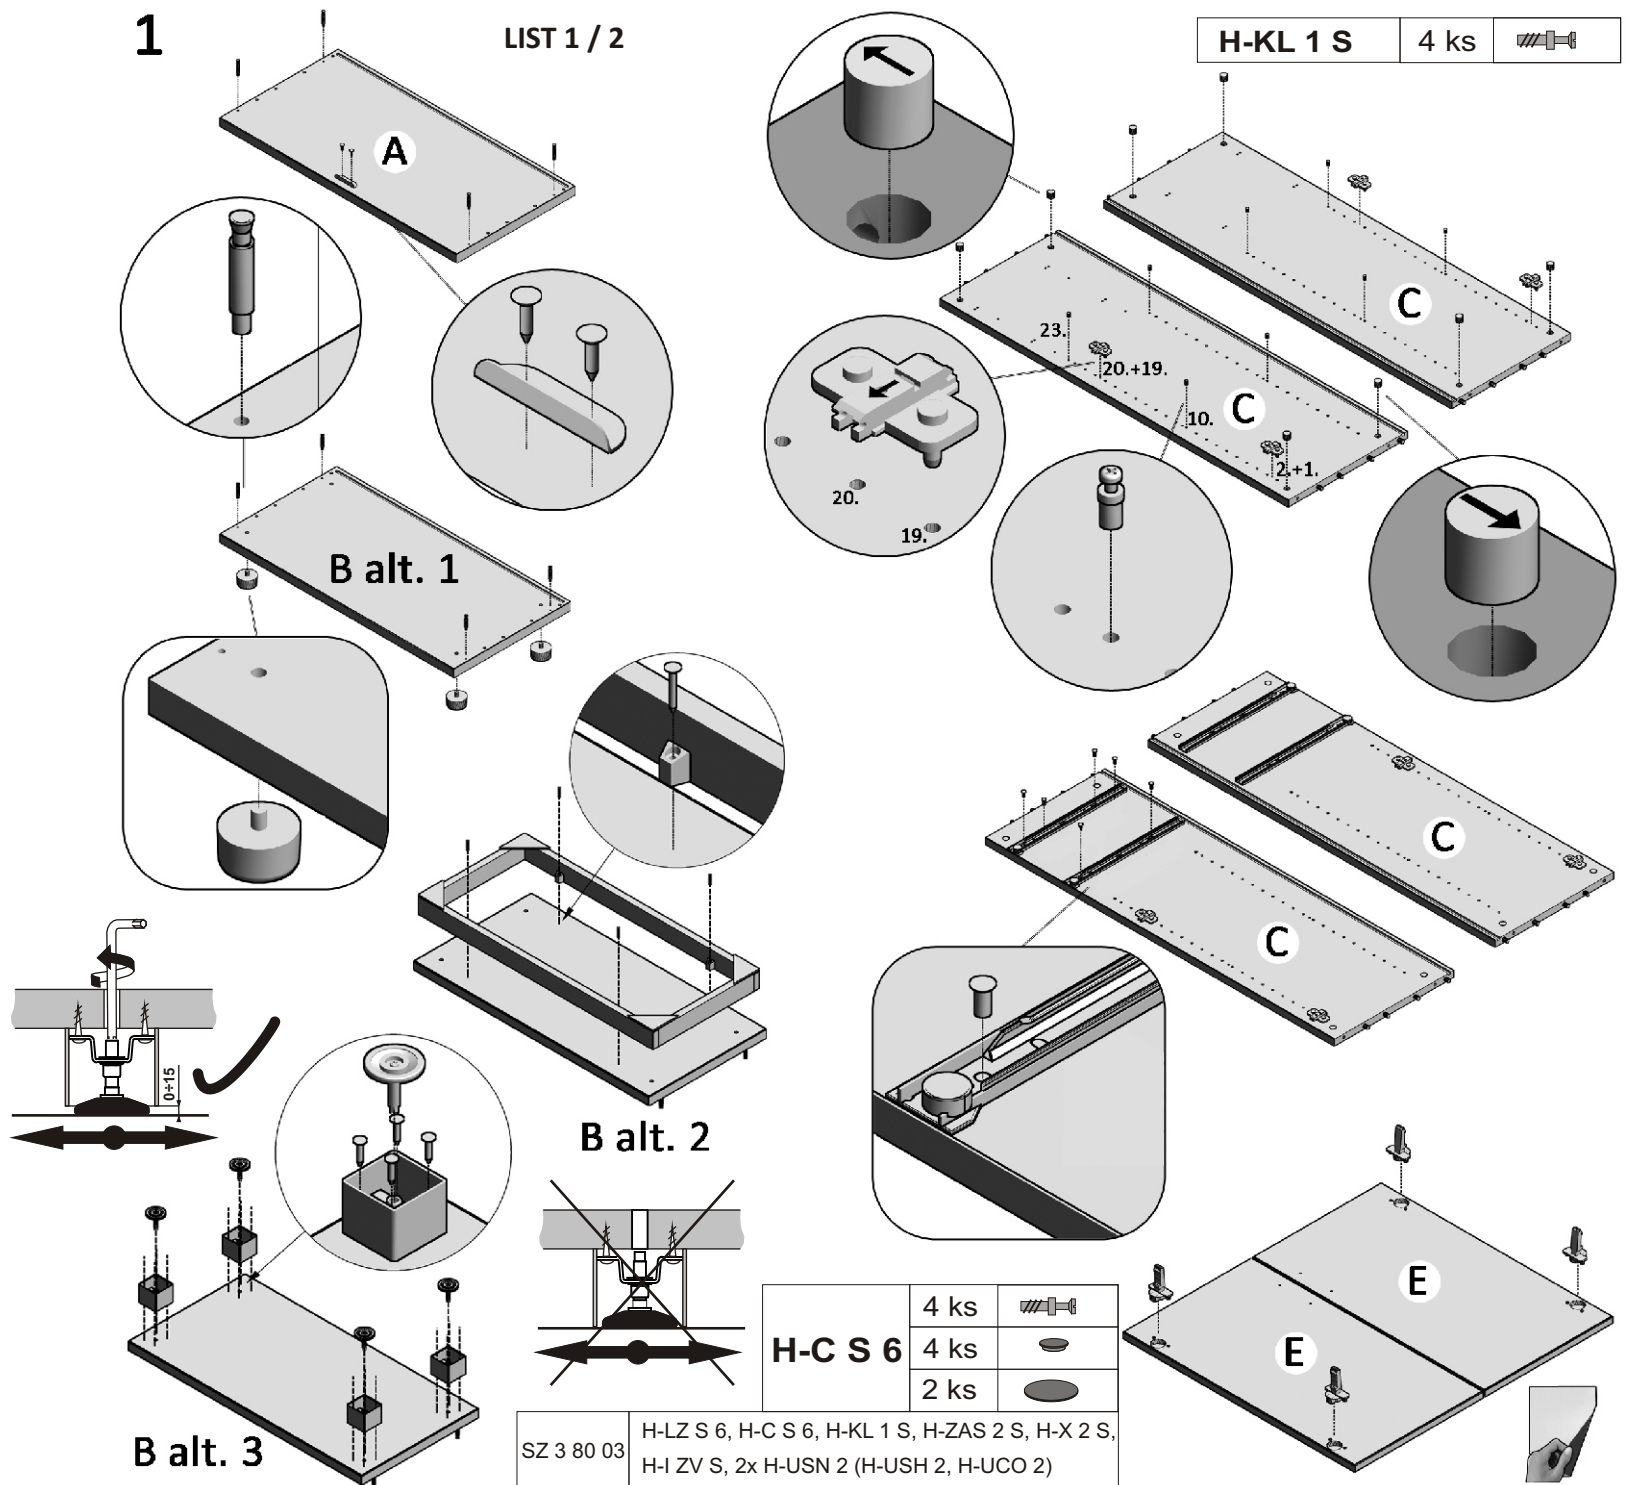


H-KL 1 S	4 ks	
-----------------	------	--


H-C S 6	4 ks	
	4 ks	
	2 ks	

SZ 3 80 03 H-LZ S 6, H-C S 6, H-KL 1 S, H-ZAS 2 S, H-X 2 S, H-I ZV S, 2x H-USN 2 (H-USH 2, H-UCO 2)


2

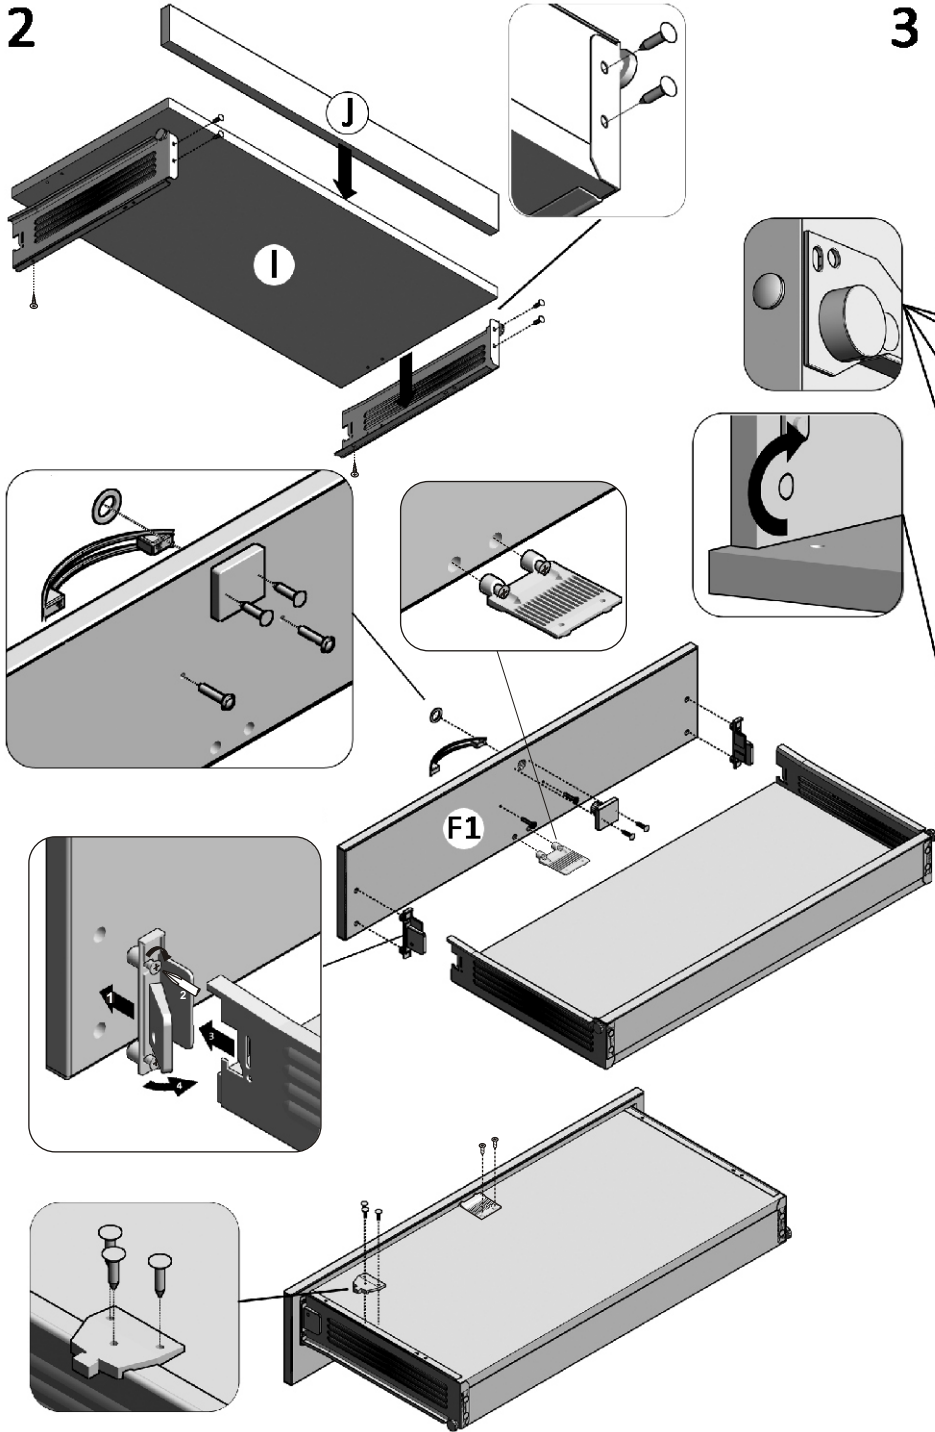

3

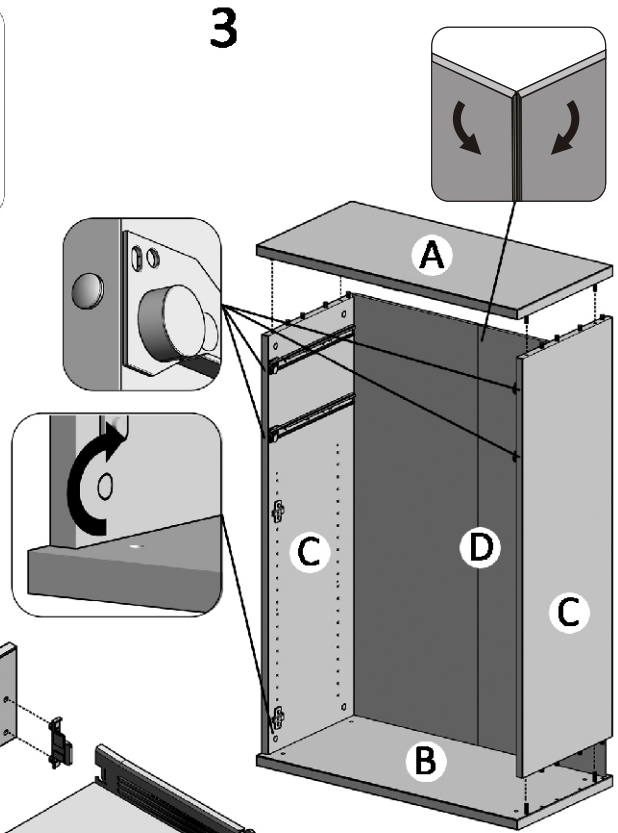

4

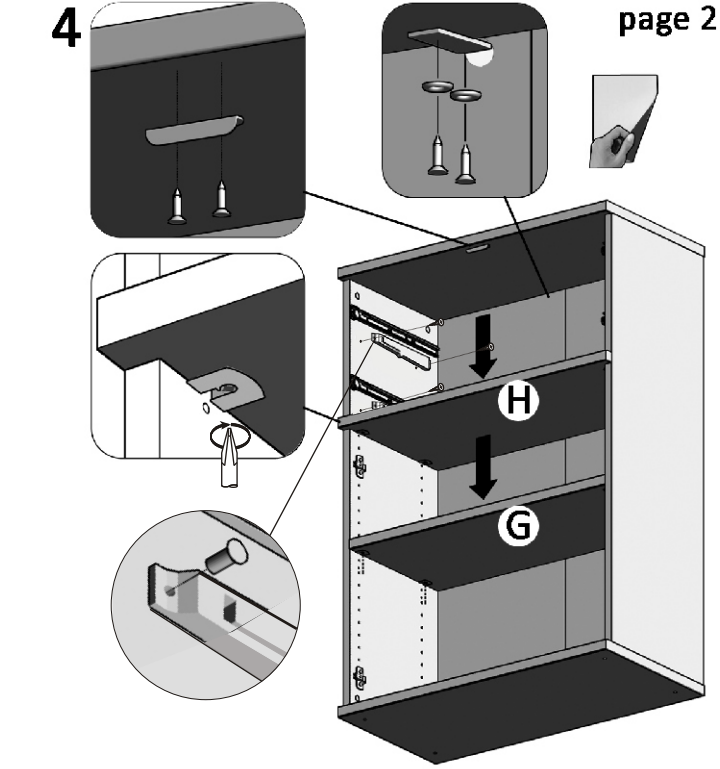

5

