

Montážní(y) návod 92.

Assembly instructions 92.

Montageanleitung 92.

GATE

GATE	GS 800	H-T 800 S, H-R 5 A S, H-TR 800 S
	GS 1200	H-T 1200 S, H-R 5 A S, H-TR 1200 S
	GS 1400	H-T 1400 S, H-R 5 A S, H-TR 1400 S
	GS 1600	H-T 1600 S, H-R 5 A S, H-TR 1600 S
	GS 1800	H-T 1800 S, H-R 5 A S, H-TR 1800 S
	GE 800	H-TE 800 S, H-RE 60 S, H-TR 800 S
	GE 1200	H-TE 1200 S, H-RE 60 S, H-TR 1200 S
	GE 1400	H-TE 1400 S, H-RE 60 S, H-TR 1400 S
	GE 1600	H-TE 1600 S, H-RE 60 S, H-TR 1600 S
	GE 60 L(P)	H-TEL(P) 60 S, H-RE 60 S, H-TR 1600 S, H-RK 14
	GE 1000 L(P)	H-TEL(P) 1000 S, H-R 5 A S, H-TR 1800 S
	GE 1800 L(P)	H-TEL(P) 180 S, H-R 5 A S, H-TR 1800 S, H-RK 14
	GEV 1800 L(P)	H-TEL(P) 180 V S, H-R 5 A S, H-TR 1800 S, H-RK 14
	GP 1200 1	H-T 5 1 S, H-R 5 S, H-TR 850 S
	GP 1600 1	H-T 5 S, H-R 5 S, H-TR 850 S
	GJ 800	H-T 800 BP S, H-R 5 S, H-TR 800 S
	GJ 1200	H-T 1200 BP S, H-R 5 S, H-TR 1200 S
	GJ 1400	H-T 1400 BP S, H-R 5 S, H-TR 1400 S
GJ 1600	H-T 1600 BP S, H-R 5 S, H-TR 1600 S	
GJ 1800	H-T 1800 BP S, H-R 5 S, H-TR 1800 S	

H-R 5 A S H-RE 60 S	4 ks		H-R 5 S	4 ks	
	4 ks			4 ks	
	4 ks			4 ks	
	4 ks			4 ks	
	4 ks			4 ks	
	8 ks			8 ks	
	1 ks			1 ks	
	2 ks			2 ks	
	1 ks			1 ks	
	3 ks			3 ks	
	4 ks				
	4 ks				



